


Idrostar

Wiring diagram set up for the red & black leads

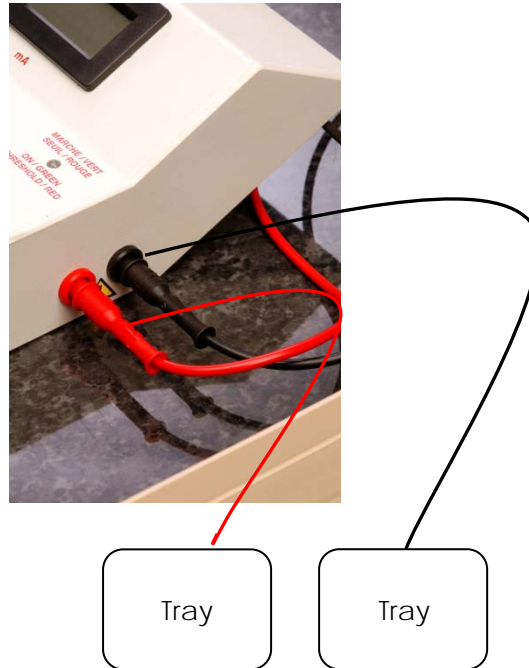

Treatment of one hand and one foot

or



Treatment of the feet

or



Treatment of the hands

or



Treatment of the axillae

N.B. Please note that the circuit is only complete when the area to be treated is placed in the baths and filled with 400mls of tap water. When treating the underarm ensure the sponge pockets have been saturated in tap water and placed in the axillae. Before the commencement of the treatment protocol please ensure that you have read the instruction manual enclosed with the machine.