


# Idrostar Pro Pulse


## Wiring diagram set up for the red & black leads

### FOR TREATMENT OF THE HANDS & FEET TOGETHER

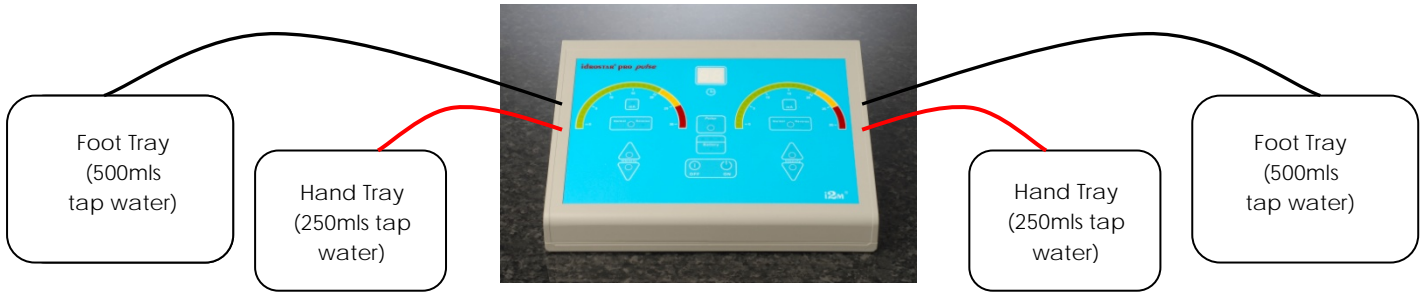

N.B. Please note that the circuit is only complete when the area to be treated is placed in the baths and filled with the correct amount of tap water. When treating the underarm ensure the sponge pockets have been saturated in tap water and placed in the axillae. Before the commencement of the treatment protocol please ensure that you have read the instruction manual enclosed with the machine.

### FOR THE TREATMENT FOR HANDS ONLY, FEET ONLY OR AXILLAE ONLY

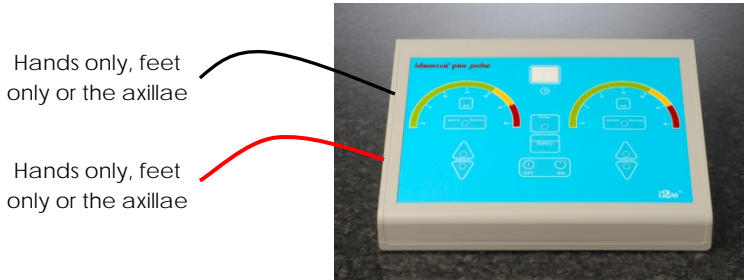

Connect the hand trays



or



Connect the foot trays

or



Connect the electrodes for the axillae